



Congratulations on your purchase of this product. Please read this user manual carefully.

Index of Parts and Functions

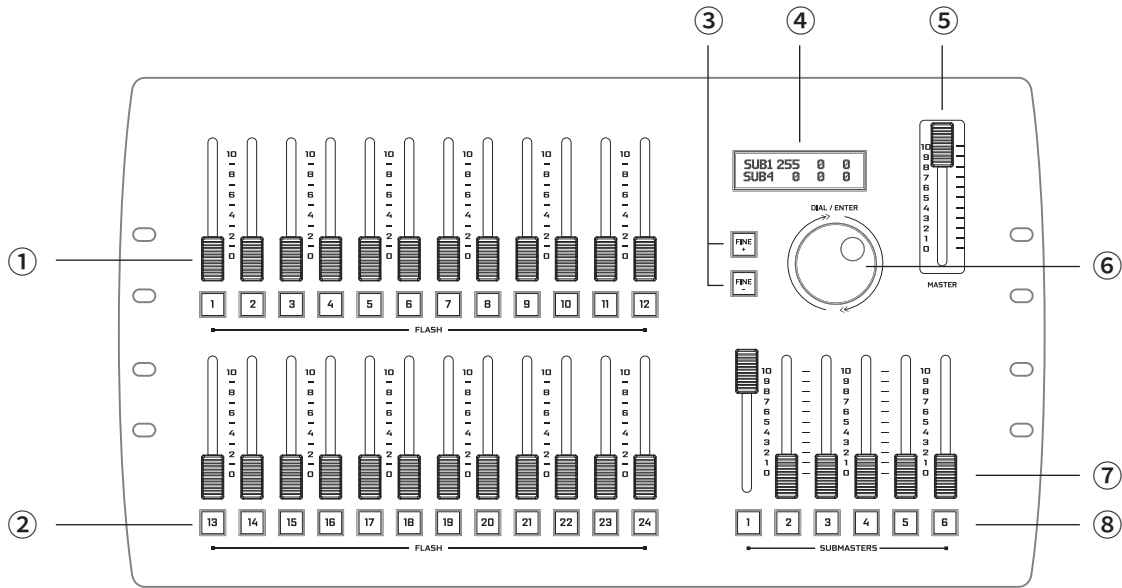

- ① Channel Sliders: 1-24 to control the DMX 1-24, 0-255 range;
- ② Flash Keys: Press and hold the key to directly maximize the value of current channel, and release the key to recover to slider position value;
- ③ (LA-R240) FINE+ / FINE-: Fine adjustment of current value; (LA-R480) PAGE+ / PAGE-: Page up and Page down to switch between 1-24 sliders and 25-48 sliders;
- ④ LCD screen: Display 0-255 value of each channel;
- ⑤ Master Slider: Control all channels together;
- ⑥ DIAL/ENTER: Revolve to switch among all the channels;
- ⑦ Submaster Sliders: Select any numbers of the 24 sliders, set to right values, and press and hold the DIAL/ENTER key, then press any of the submaster key to group these sliders.
- ⑧ Flash Keys: Press and hold the key to directly maximize the value of the submaster channels, and release the key to recover to slider position value.

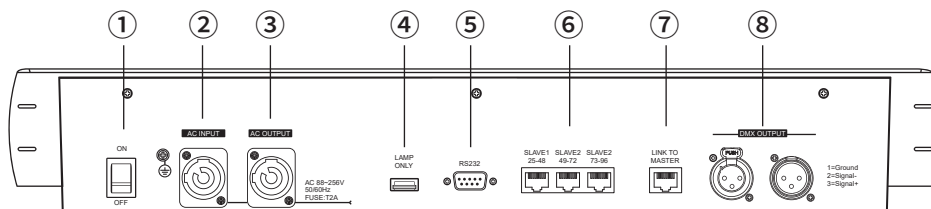

- ① ON/OFF: Power on/off switcher;
 - ② AC INPUT: AC 88~256V 50/60Hz input;
 - ③ AC OUTPUT: AC 88~256V 50/60Hz loop output;
 - ④ USB: 5V/1A power output;
 - ⑤ RS232: Reserved for factory use;
 - ⑥ RJ45 Slave 1/2/3: Connect up to 3 slave units by RJ45 cables to expend the DMX channels:
- | Model | SLAVE 1 | SLAVE 2 | SLAVE 3 |
|---------|----------|-----------|------------|
| LA-R240 | CH 25-48 | CH 49-72 | CH 73-96 |
| LA-R480 | CH 49-96 | CH 97-144 | CH 145-192 |
- ⑦ RJ45 Link to Master: Connect to Master unit by RJ45 cable;
 - ⑧ DMX OUT: DMX512 output of both 3-pin XLR male and female.